

Figure 3

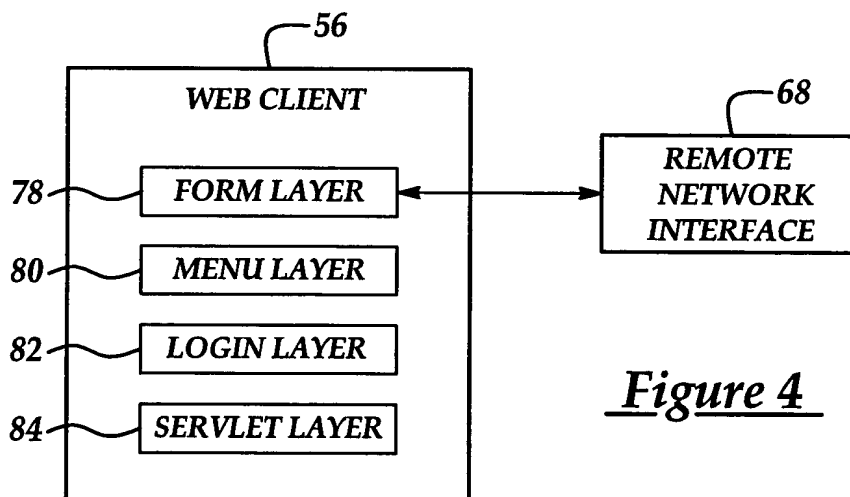 


Figure 4

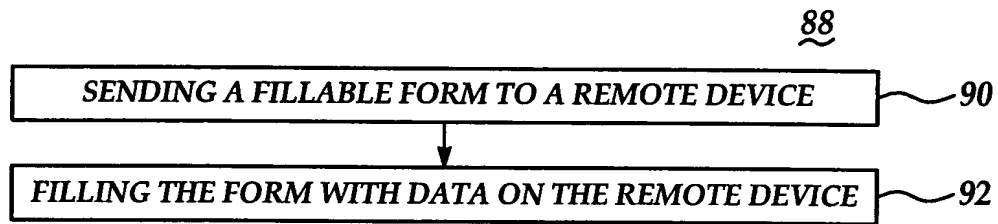 


Figure 5A

112

114 FIRST NAME

116 MIDDLE NAME


118 LAST NAME

PIN

120 ****

122 SAVE PLAYER

Figure 6

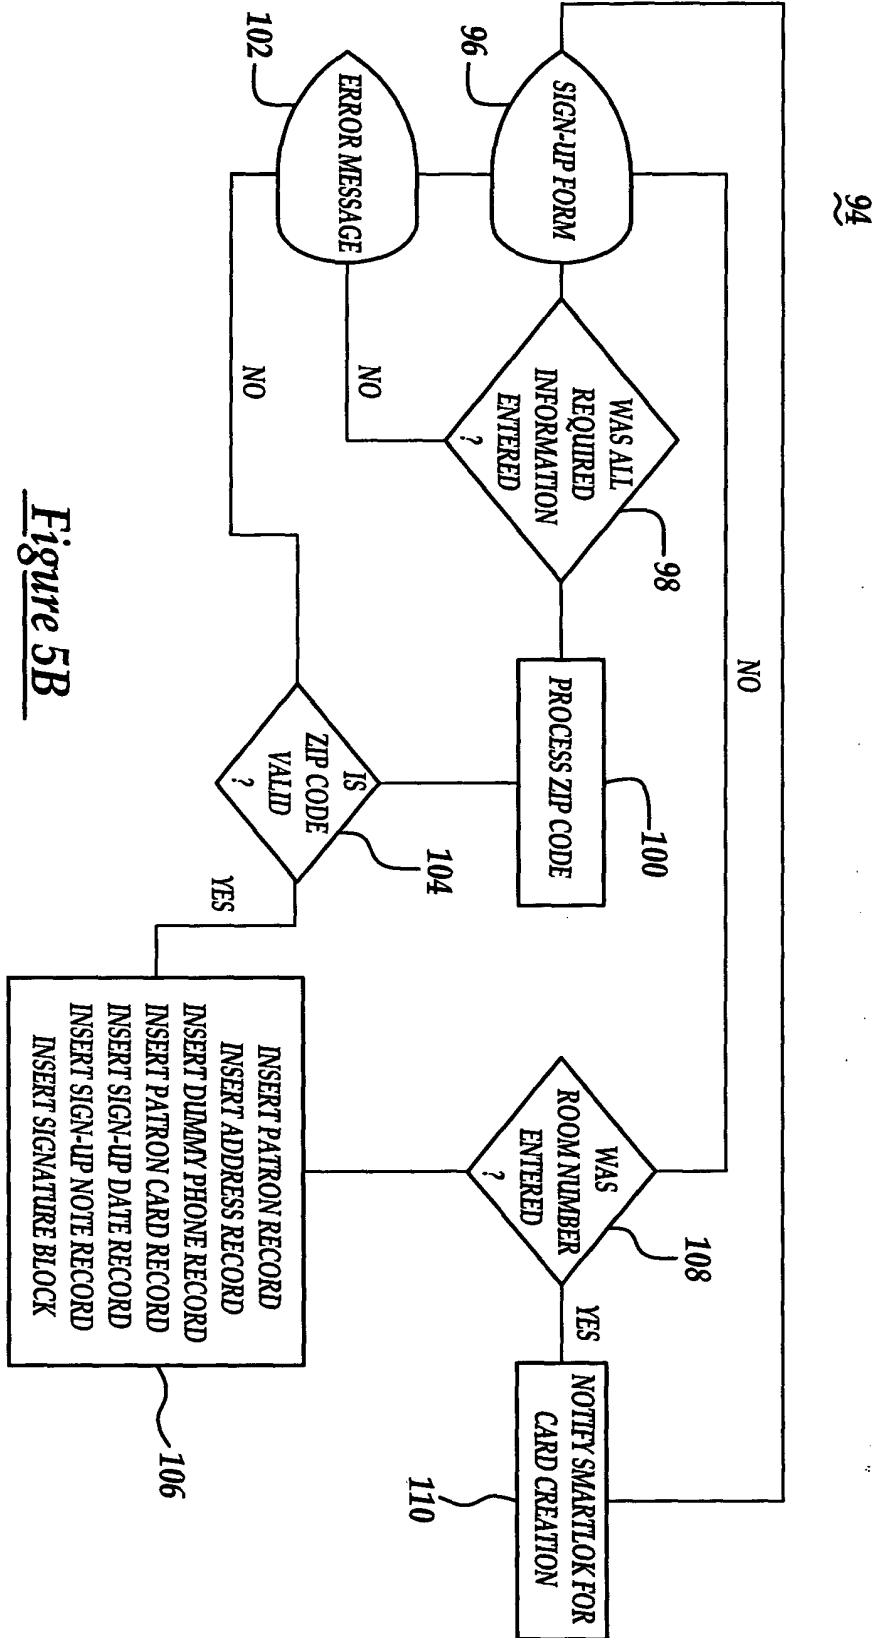 

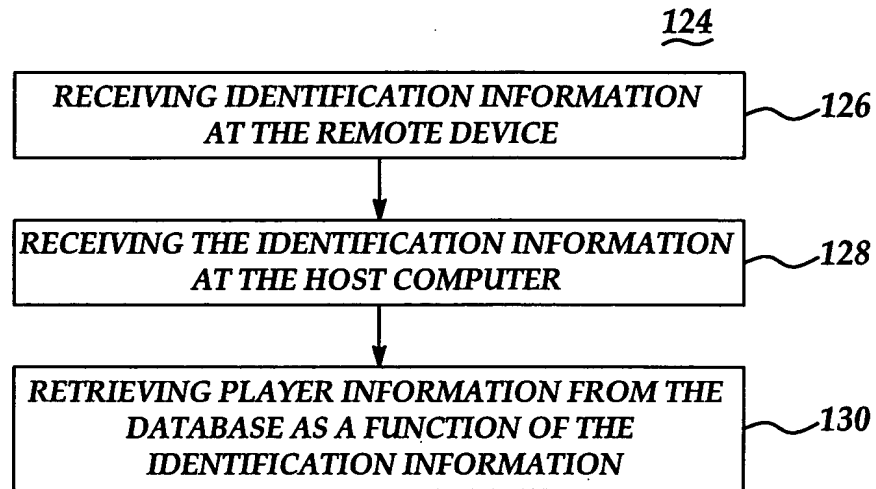 


Figure 7A

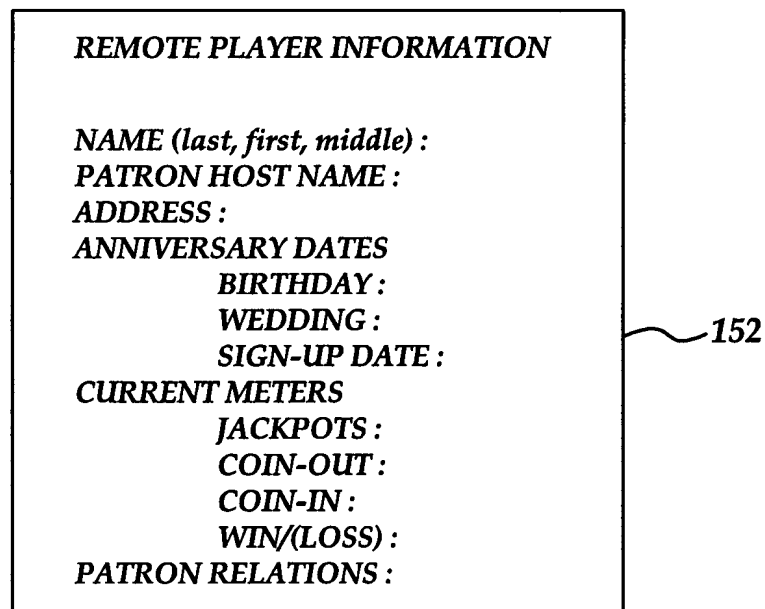 


Figure 8

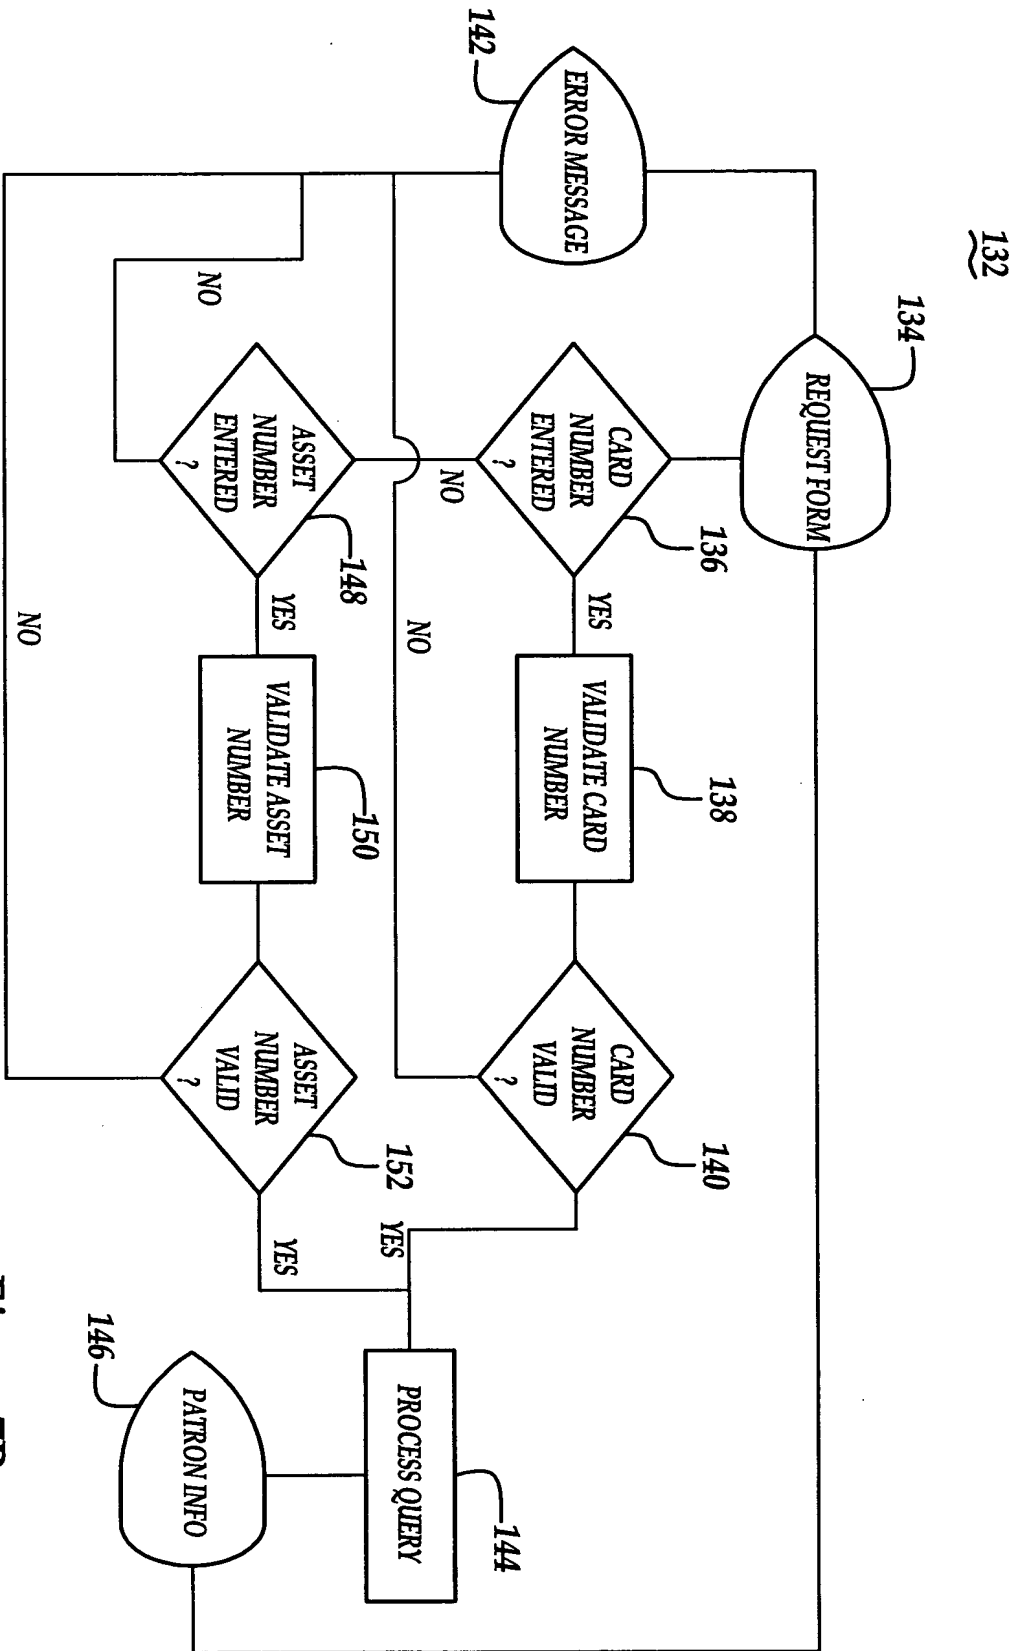 


Figure 7B

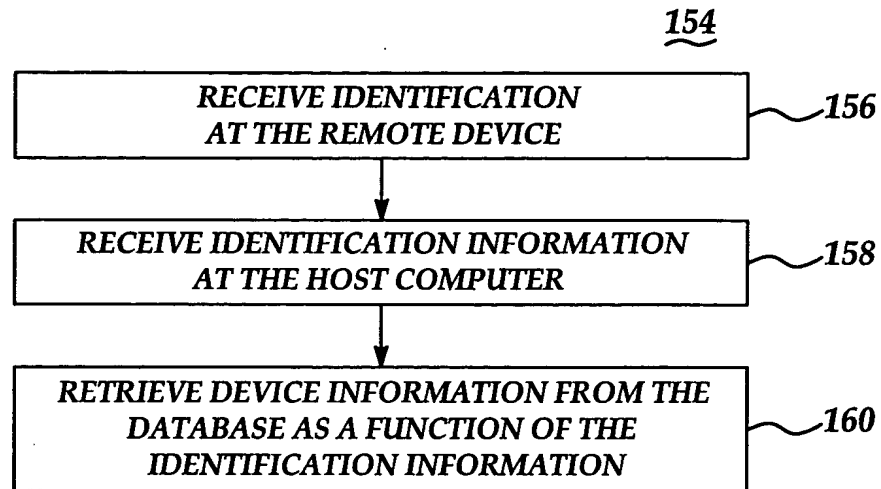 


Figure 9A

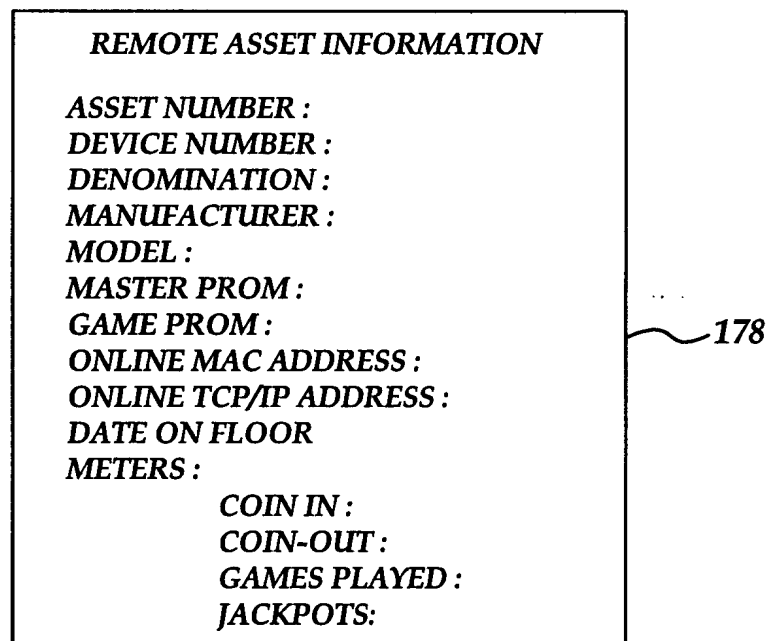
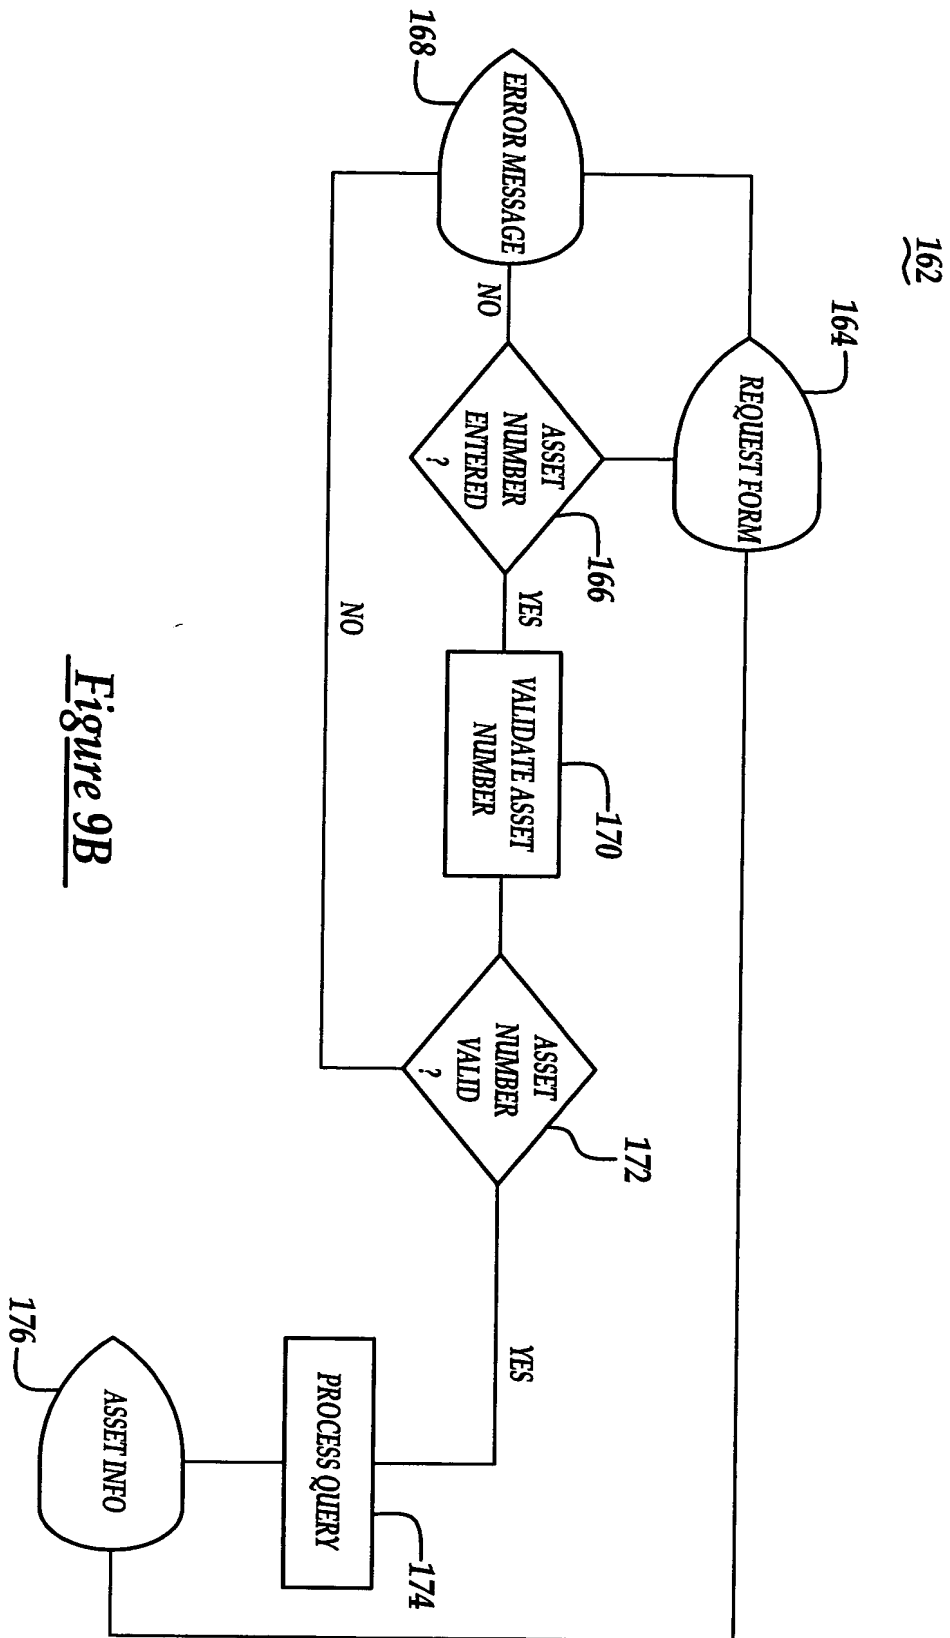 


Figure 10

 

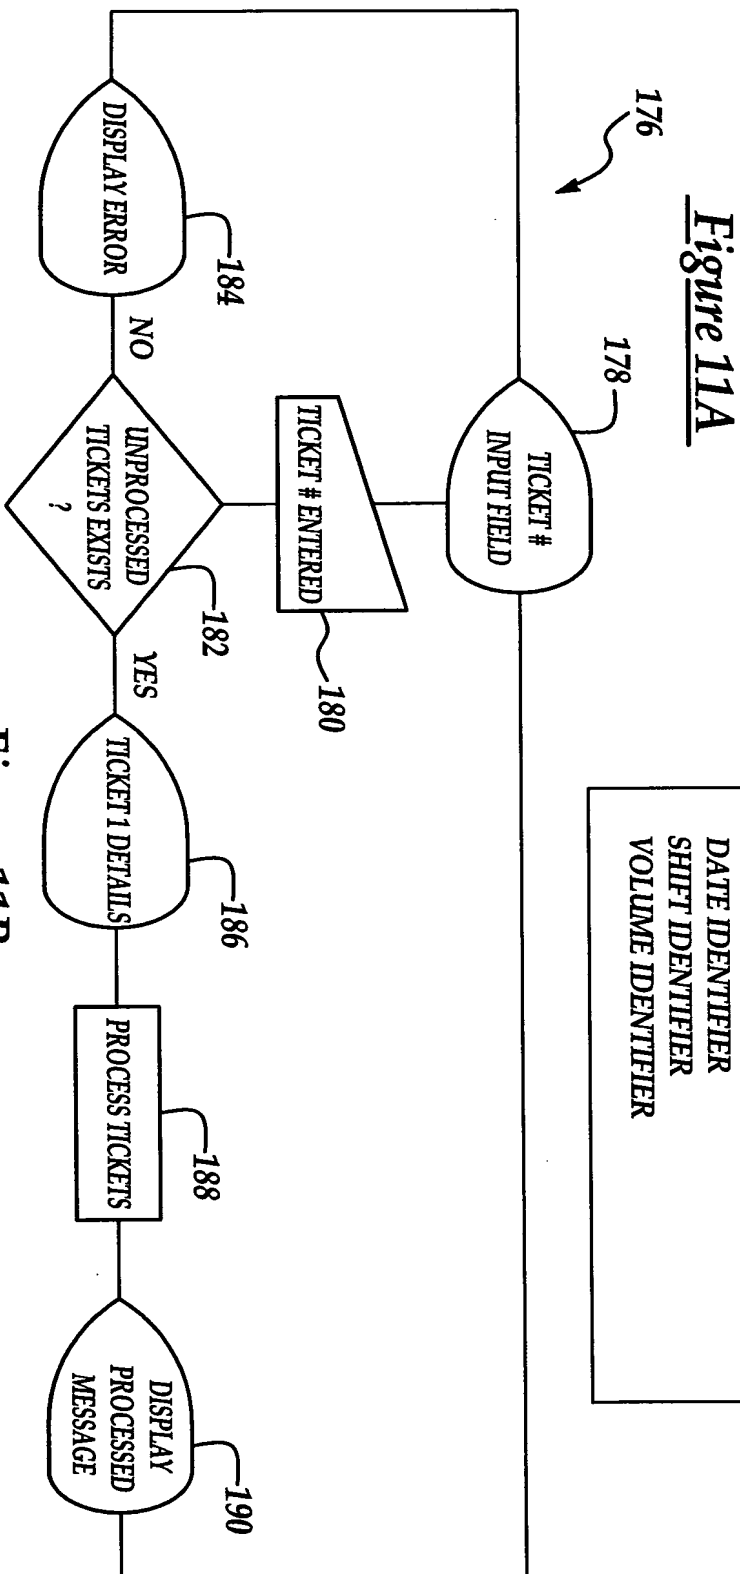 
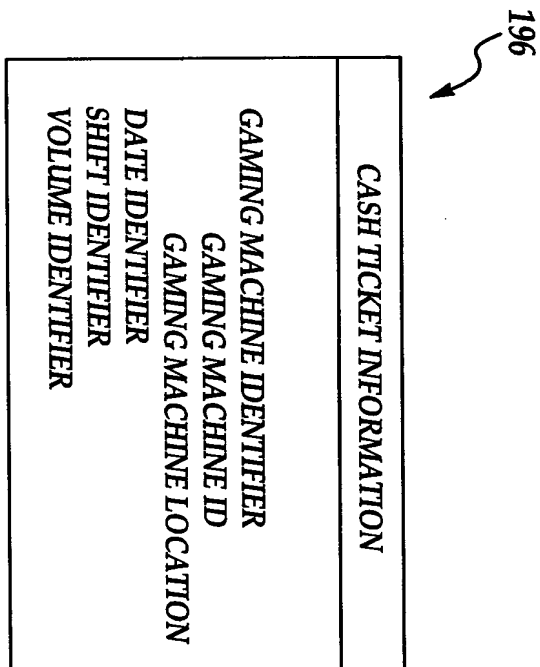 
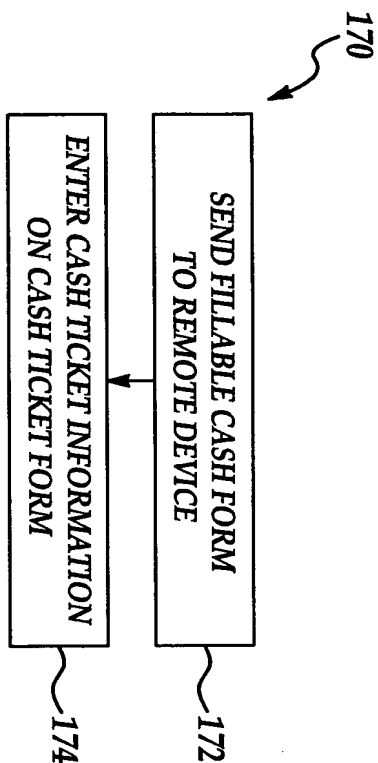 


Figure 11B

Figure 12

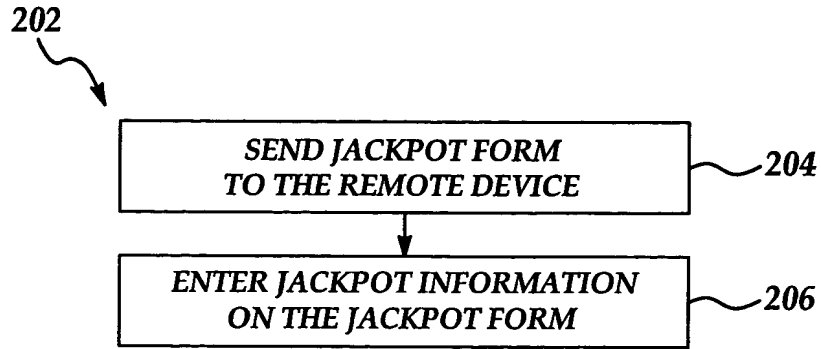 


Figure 13A

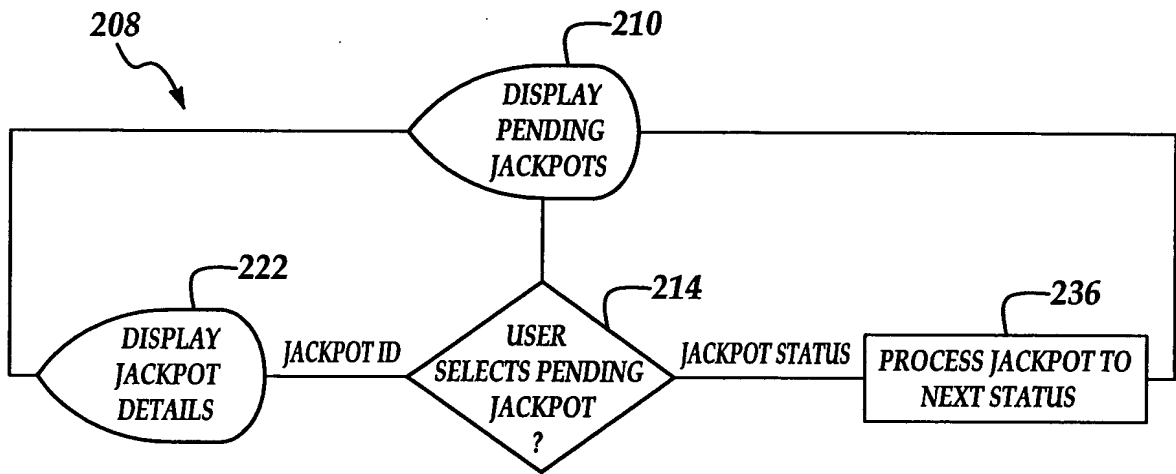 


Figure 13B

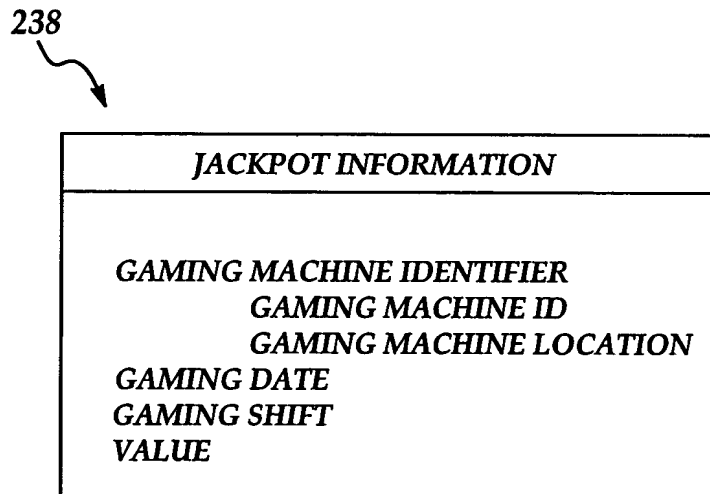 


Figure 14A

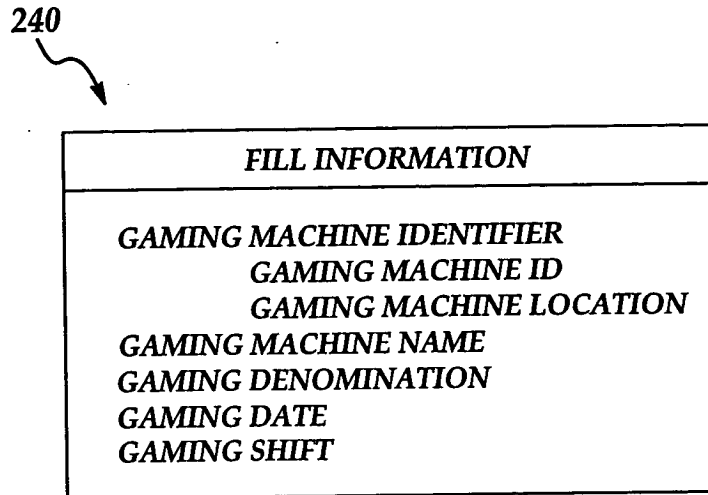 


Figure 14B

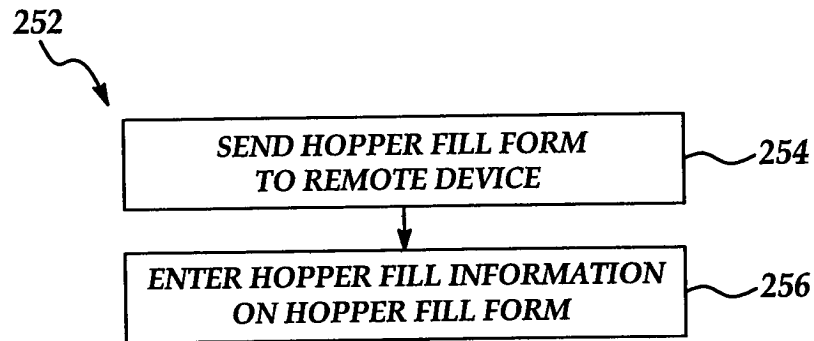 


Figure 15A

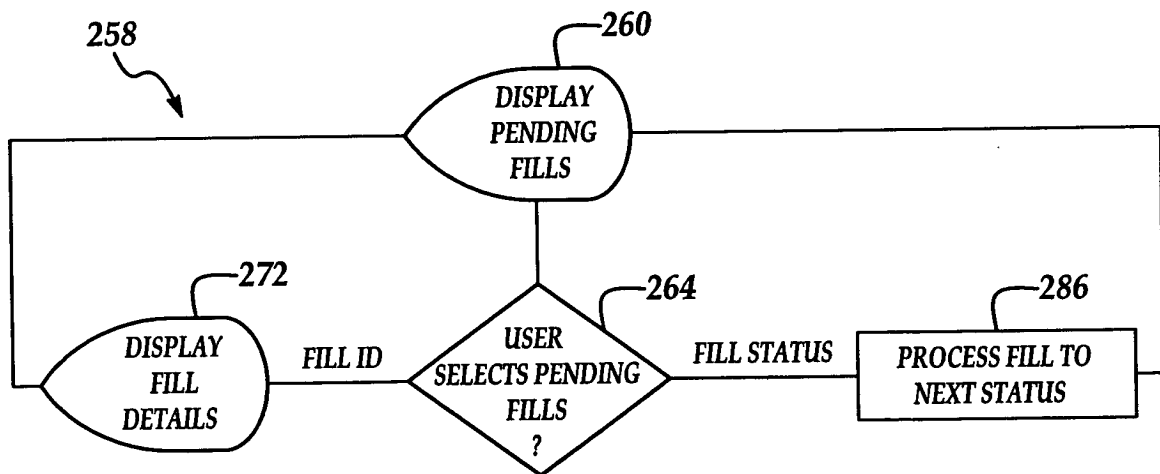 


Figure 15B

288

HOPPER FILL INFORMATION
GAMING MACHINE IDENTIFIER GAMING MACHINE ID GAMING MACHINE LOCATION GAMING DATE GAMING SHIFT VALUE

Figure 16A

290

FILL INFORMATION
GAMING MACHINE IDENTIFIER GAMING MACHINE ID GAMING MACHINE LOCATION GAMING MACHINE NAME GAMING DENOMINATION GAMING DATE GAMING SHIFT

Figure 16B

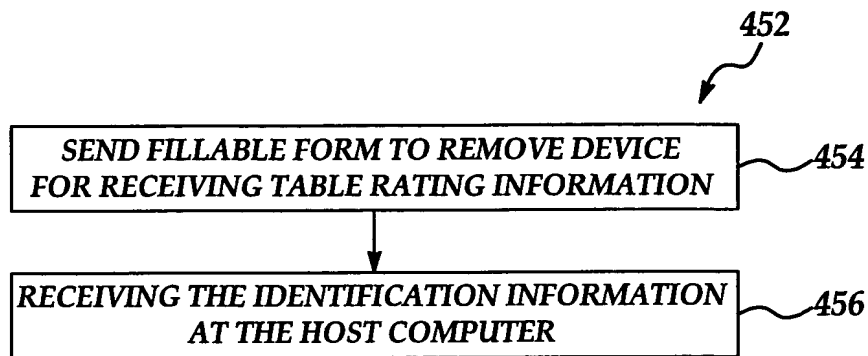 


Figure 17A

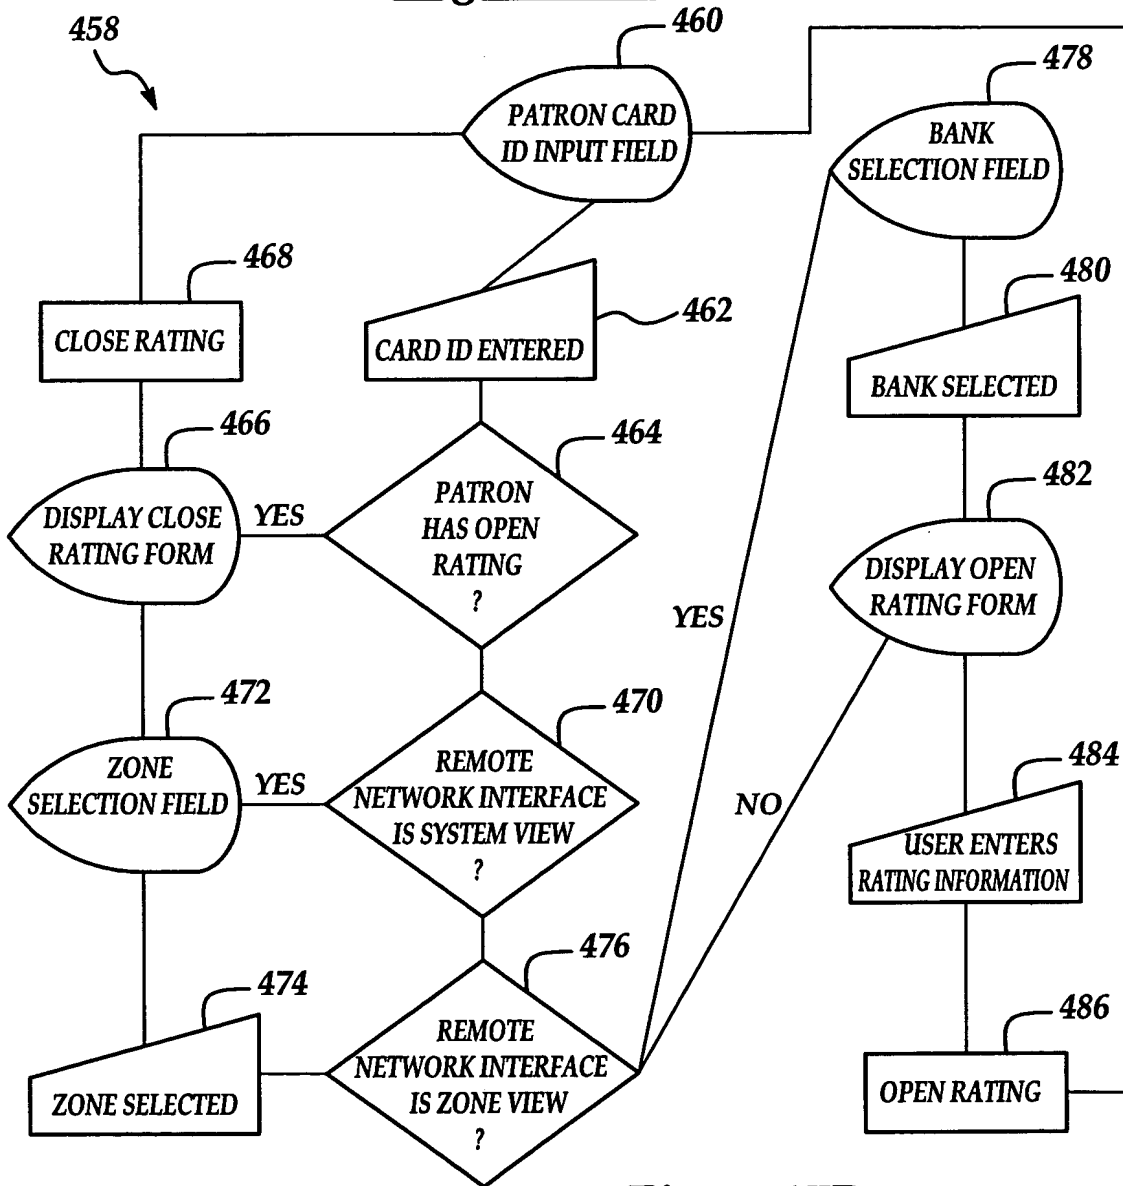 


Figure 17B

488

OPEN TABLE RATING FORM

PLAYER NAME
ZONE INFORMATION
BANK INFORMATION
SEAT IDENTIFIER
ESTIMATED AVERAGE BET
BET VALUE

STATUS
BUTTON

Figure 18

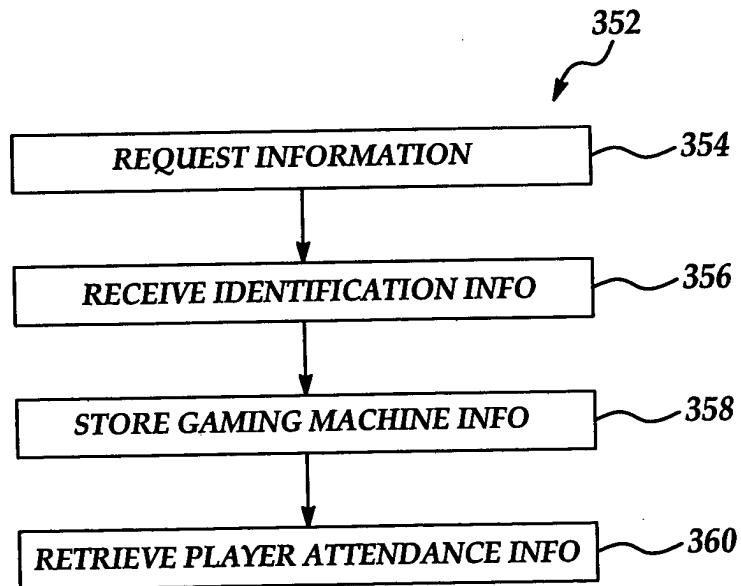 


Figure 19A

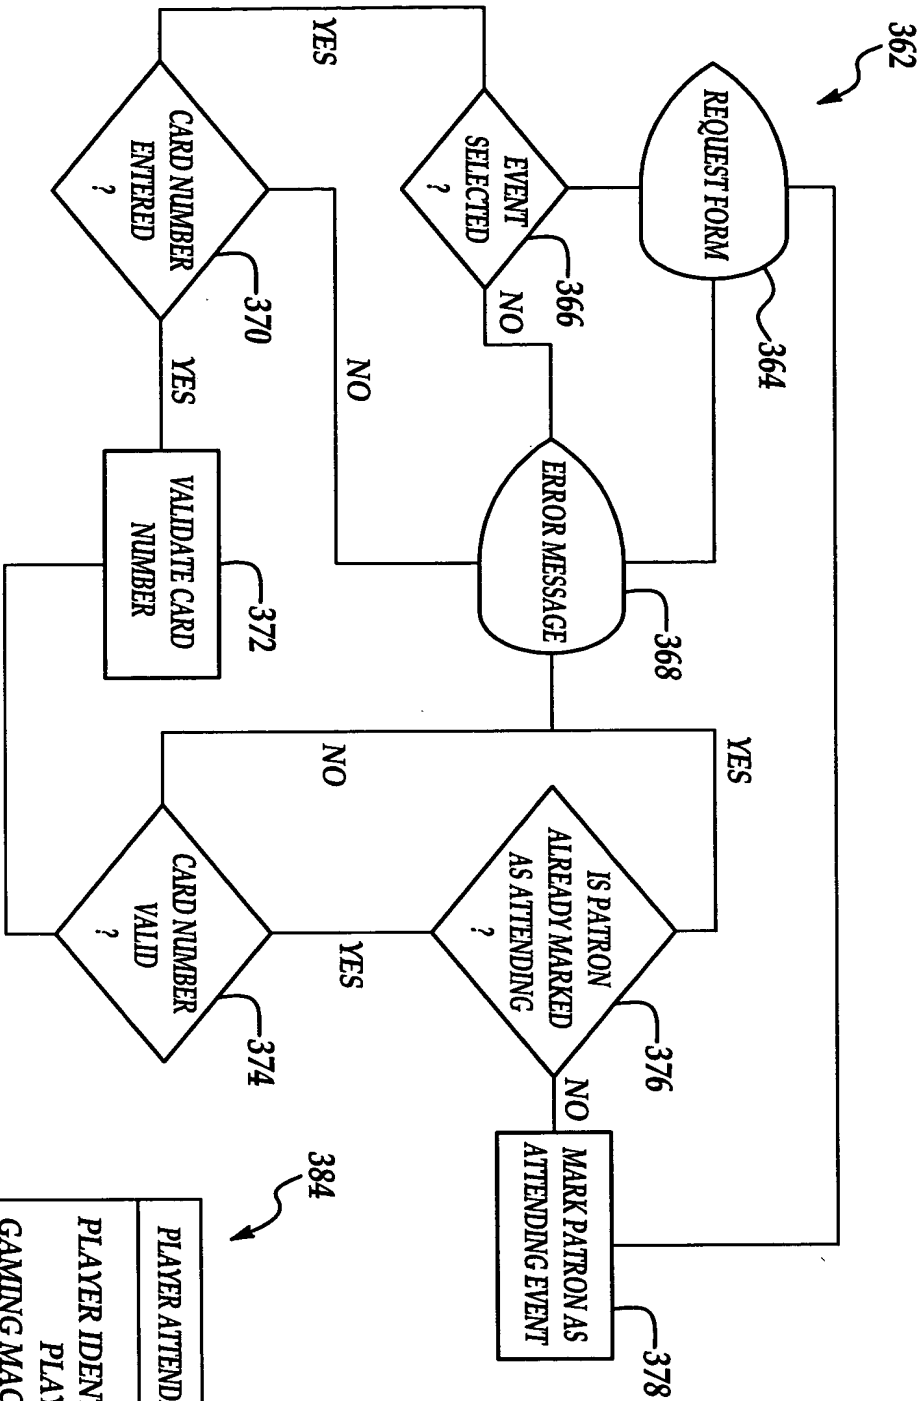 


Figure 19B

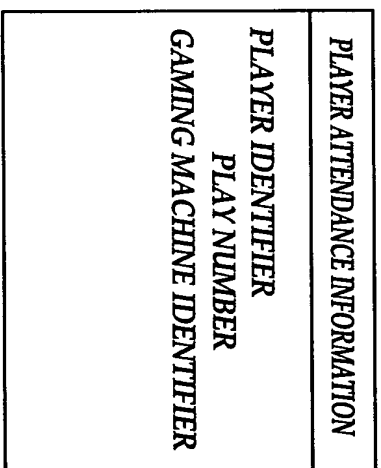 


Figure 20

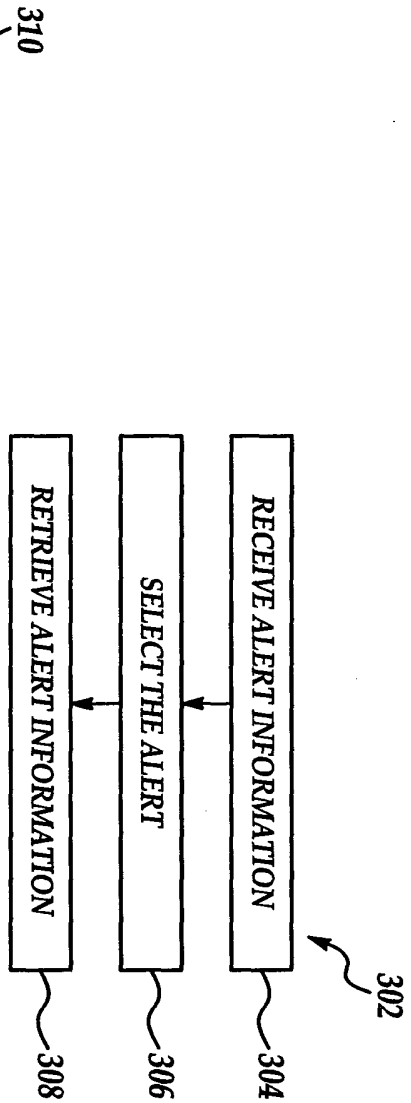 


Figure 21A

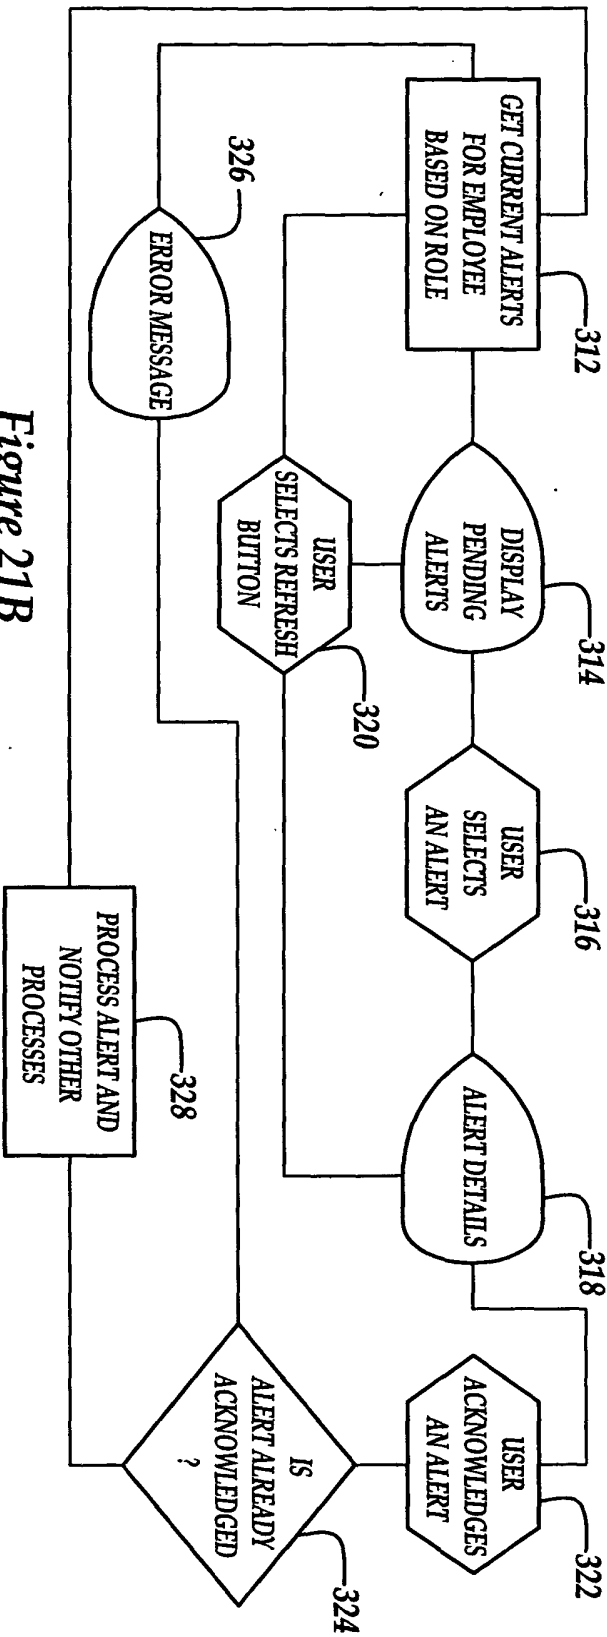 


Figure 21B

330

ALERT INFORMATION
TYPE
DATE / TIME
DEVICE
REPOSITORY
ZONE NAME
BANK NAME
DOCUMENT NUMBER
VALUE
POINTS
EMPLOYEE
ALERT MESSAGE

Figure 22

500

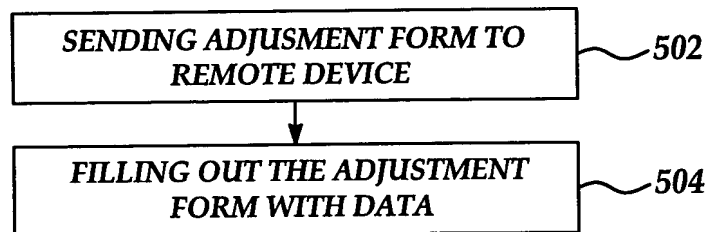 


Figure 23A

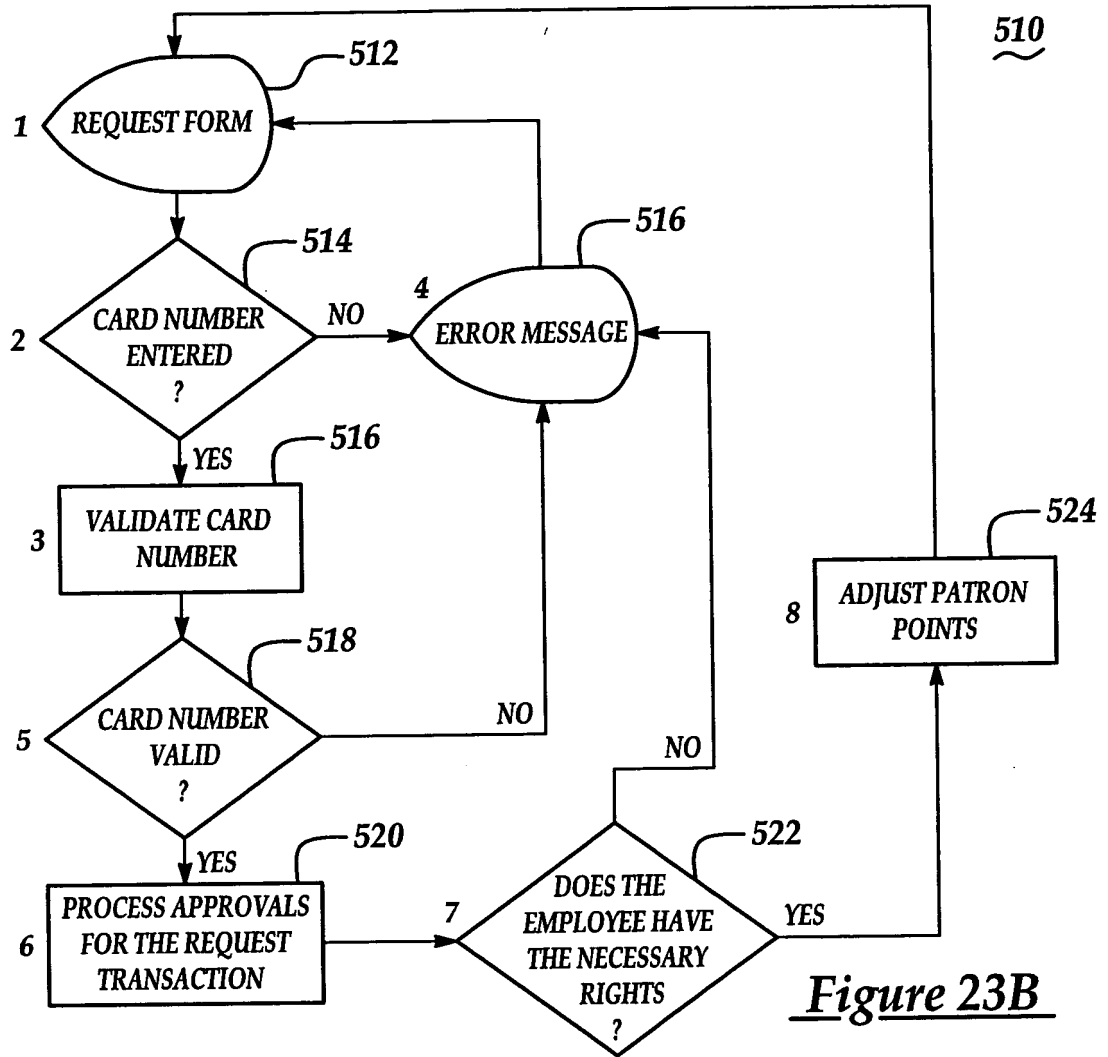 


Figure 23B

506

POINT ADJUSTMENT REQUEST FORM	
TYPE :	
POINTS :	
REASON :	
CARD :	
<input type="button" value="ISSUE"/>	

Figure 24

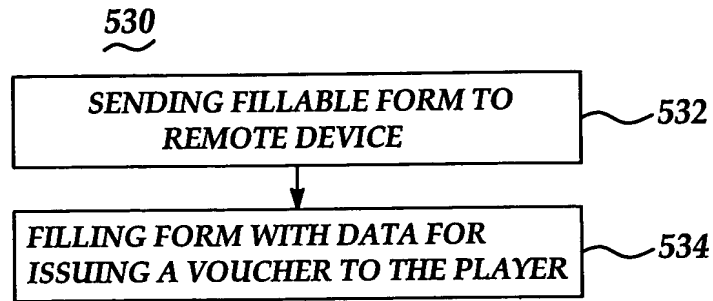 


Figure 25A

536

PLAYER VOUCHERS FORM

PATRON :
CARD :
TYPE :
POINTS :
VOUCHERS :

ISSUE

Figure 26

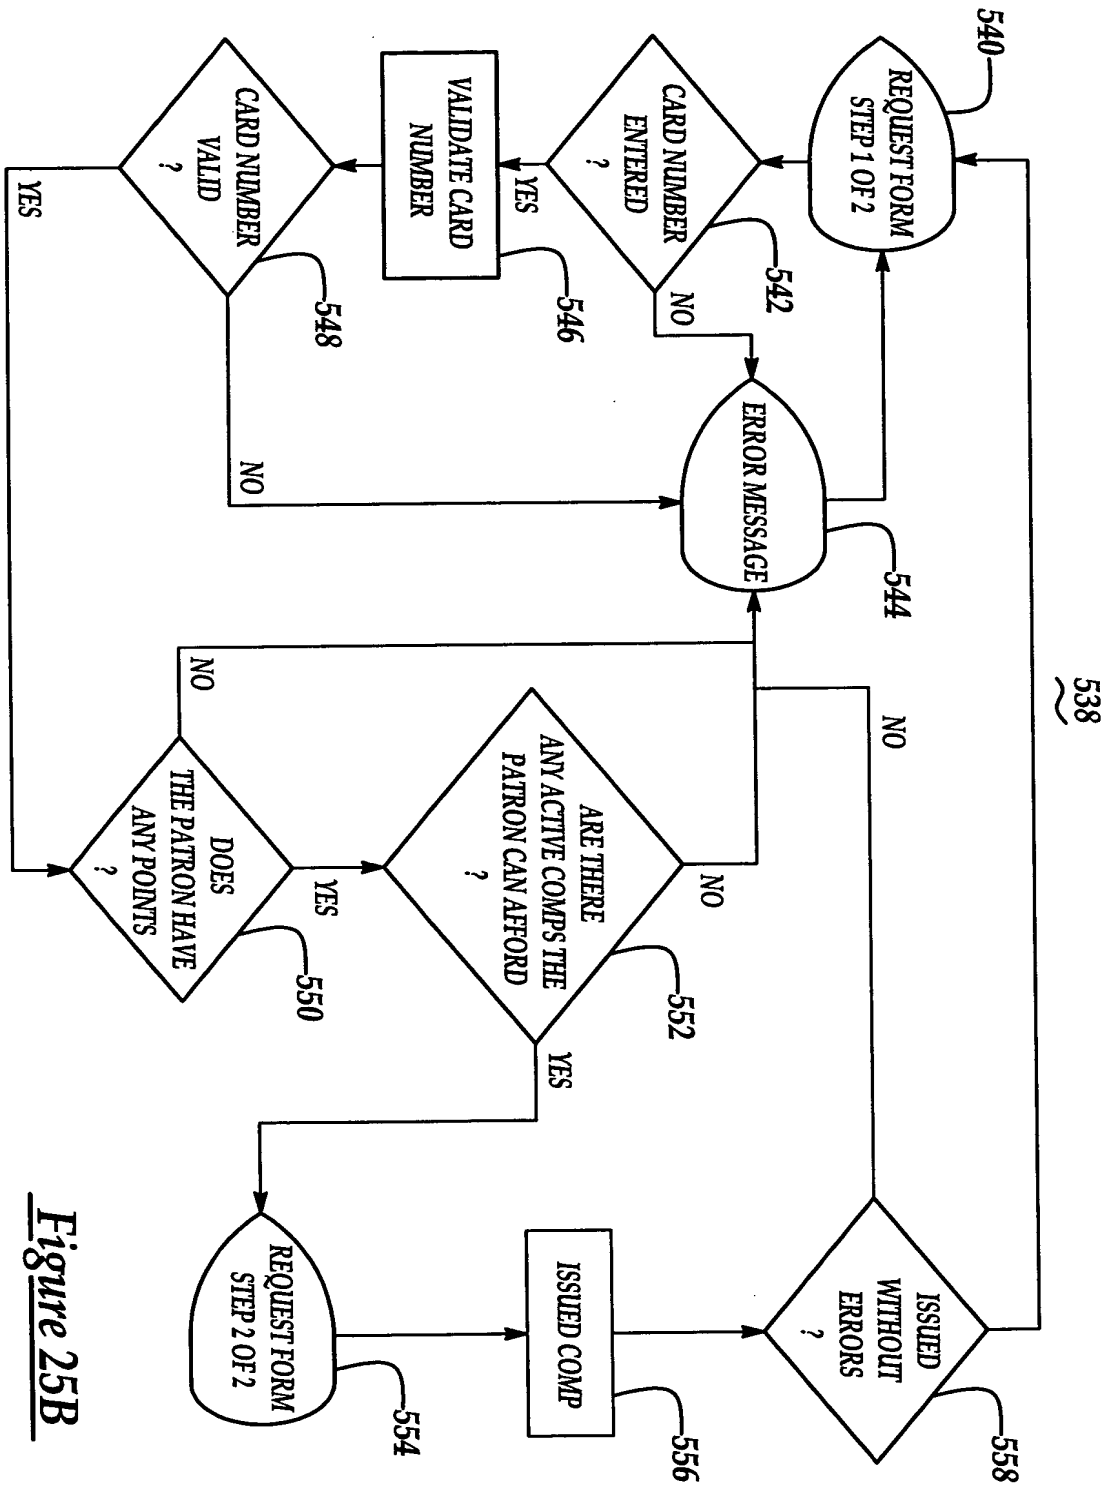 


Figure 25B

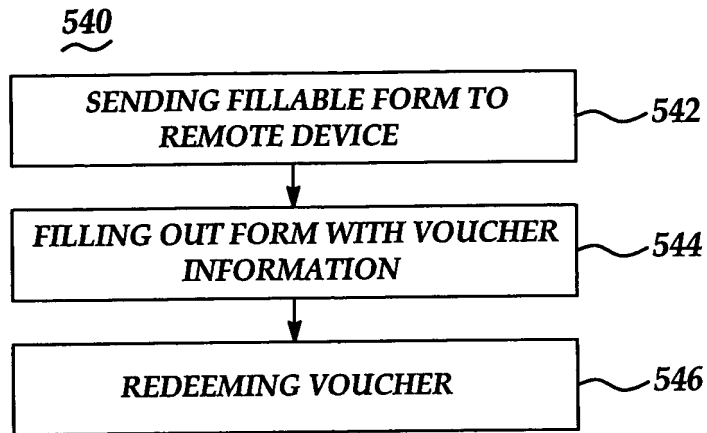 


Figure 27A

548

The form 548 is a rectangular box. At the top, it has a header section labeled 'VOUCHER INFORMATION FORM'. Below the header, there are four lines of text: 'VOUCHER ID:', 'GOOD FOR:', 'ISSUED ON:', and 'EXPIRES ON:'. At the bottom center of the form, there is a rectangular button labeled 'CONTINUE'.

Figure 28

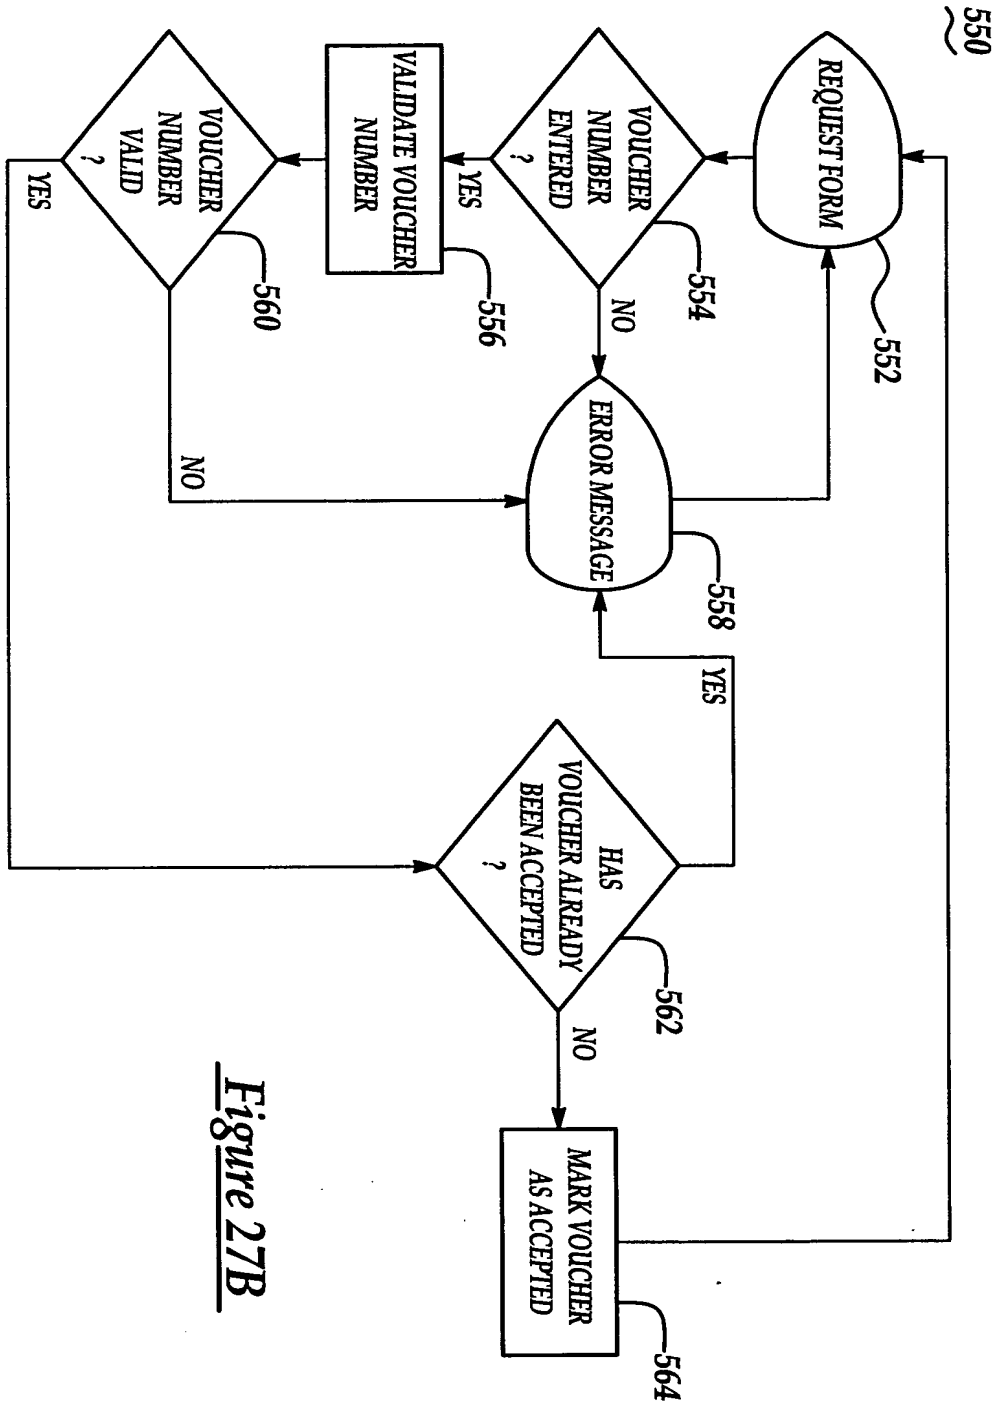 


Figure 27B

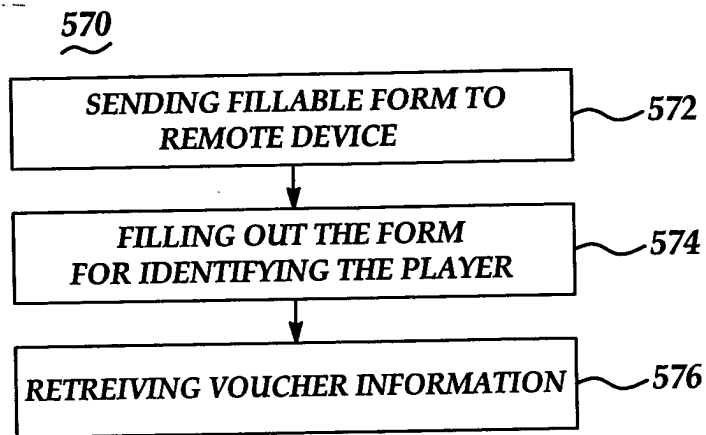 


Figure 29A

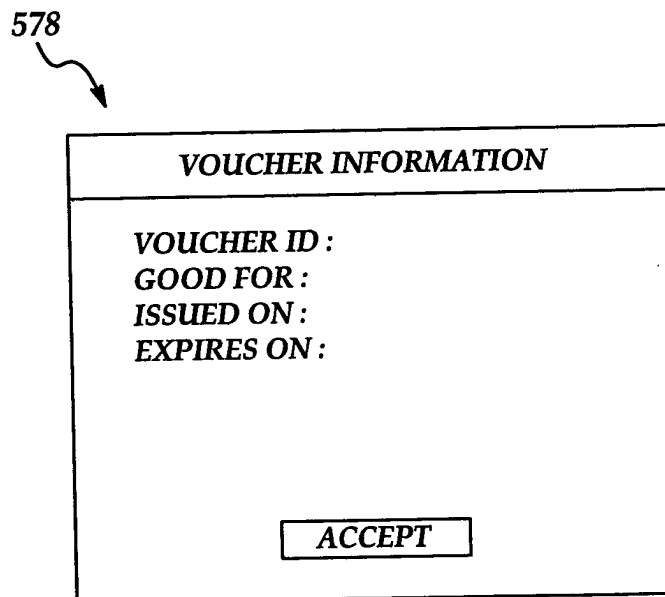 


Figure 30

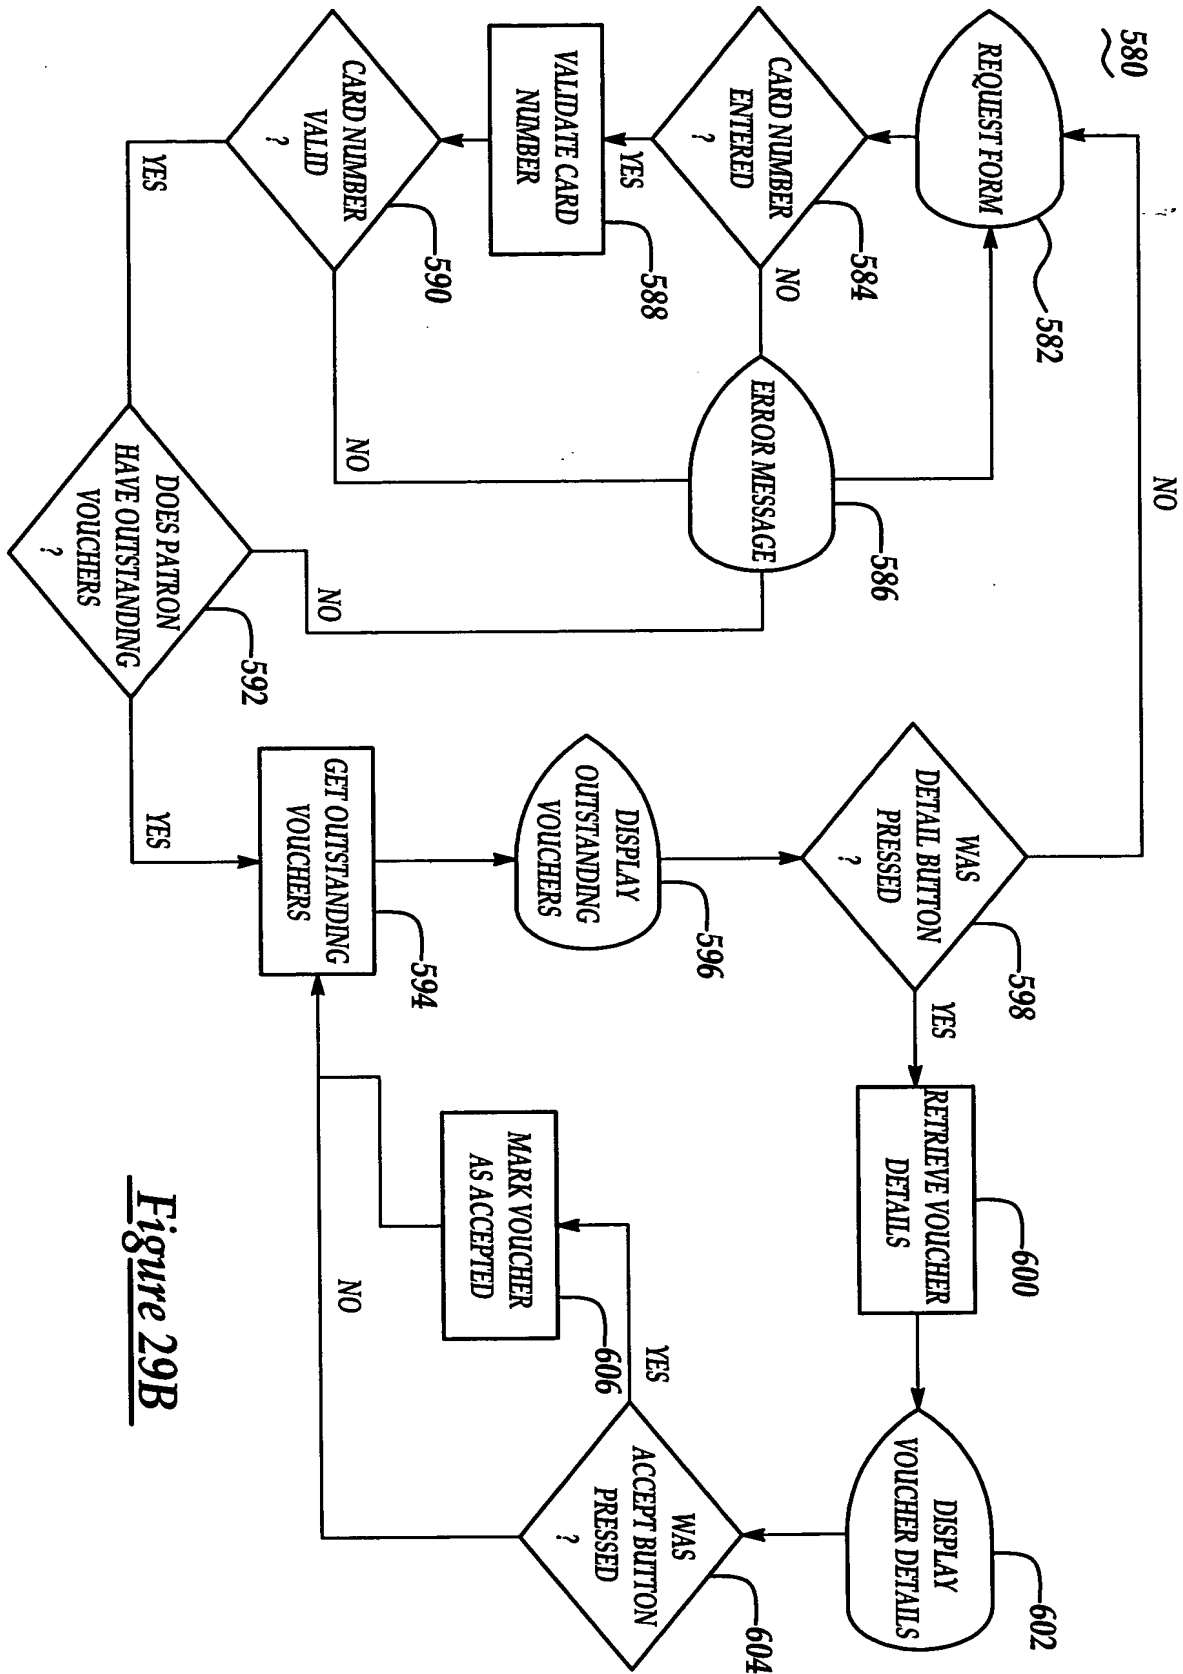 


Figure 29B